




РЕДУКТОР ДАВЛЕНИЯ С ПРЕДНАСТРОЙКОЙ



МОНТАЖ

Перед монтажом убедитесь, что в системе нет загрязнений: рекомендуется промыть трубопровод. Перед редуктором также рекомендуется установить фильтр, хотя на картридже есть фильтрующая сетка. **Исполнения арт. 2880-2881-2882-2883 уже оснащены фильтром.** Для удобства обслуживания и доступа при монтаже предусмотрите два запорных крана — до и после редуктора. **Направление потока в редукторе указано стрелкой на корпусе.**


НЕ УСТАНАВЛИВАЙТЕ РЕДУКТОР ВВЕРХ ДНОМ

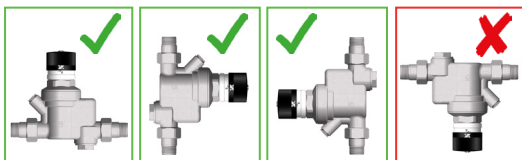

ОБСЛУЖИВАНИЕ

Фильтр на картридже (5) нужно периодически чистить, особенно если вода содержит много загрязнений или перед редуктором нет фильтра. Порядок чистки:


1- Закройте запорные краны до и после редуктора

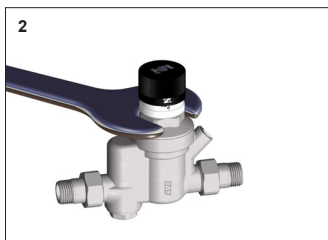

2- Ключом на 36 мм отвинтите верхнюю часть редуктора.




3- Выньте пружину и картридж. Почистите их; если картридж повреждён, замените его.

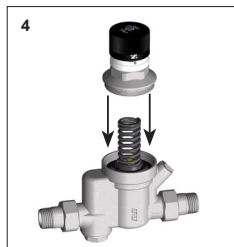

4- Правильно соберите компоненты редуктора и заверните.

*Арт. 2880-2881-2882-2883 оснащены фильтром, который требует обслуживания

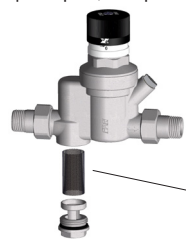

APT. 2389

*Сменный фильтр
(арт. 2880-2881-2882-2883)

APT. 2893

Сменный картридж редуктора



Соединения НР-ВР



Соединения ВР-ВР

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

Макс. рабочее давление на входе: 25 бар
Настройка давления на выходе: 1-6 бар
Мин. рабочая температура: 5 °C
Макс. температура среды: 75 °C
Рабочие среды: вода и воздух


НАСТРОЙКА ДАВЛЕНИЯ

Чтобы настроить давление на выходе, поворачивайте рукоятку до нужного значения, контролируя его в окошке на рукоятке.



+ По часовой стрелке:
давление на выходе
растёт

- Против часовой
стрелки:
давление на выходе
падает

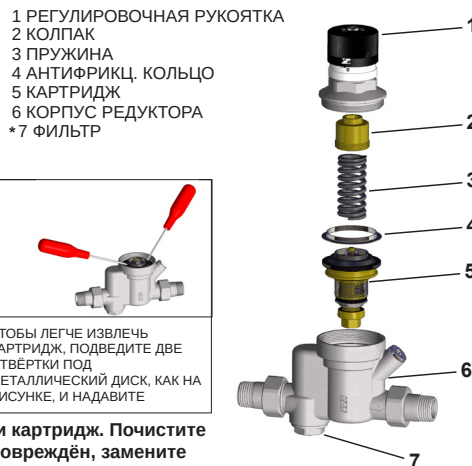

PRE-ADJUSTABLE PRESSURE REDUCING VALVE




INSTALLATION

It is essential that the system is clean and free of debris, therefore an accurate cleaning of the pipework is recommended prior to installation. It is also advisable that a strainer should be located upstream of the pressure reducer, even though a small filter is already built into the cartridge. **The versions Art. 2880-2881-2882-2883 are already equipped with an internal filter.**

For easier access and maintenance the pressure reducer is normally located between two shut off valves, one downstream and one upstream.

Flow direction is indicated by the arrow placed on the reducer body.

DO NOT INSTALL THE REDUCER UPSIDE DOWN

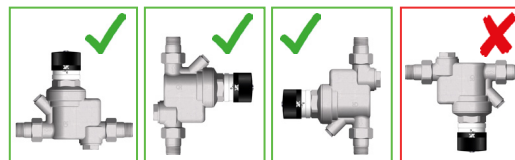


MAINTENANCE


The presence of a small strainer (built in to the cartridge 5) inside the reducing valve requires a regular maintenance, mainly in case of systems working with water rich of debris or with no strainer upstream.

To carry out this operation you have to:


1- Close the shut off valves located before and after the pressure reducer

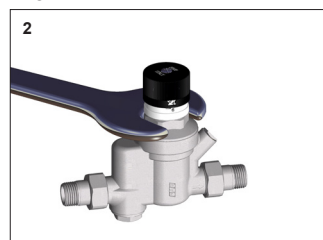

2- Using a 36mm wrench unscrew the upper part of the reducer

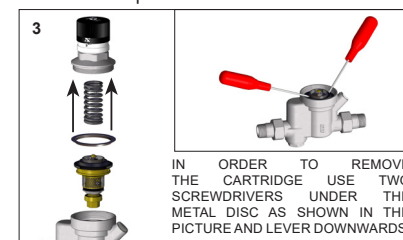


3- Remove the spring and the cartridge and carry out the cleaning. Should the cartridge be damaged, replace it.

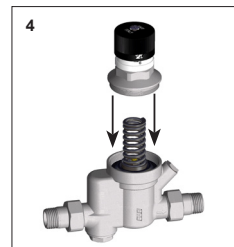

4- Re-assemble properly all components into reducer and screw again

*Арт. 2880-2881-2882-2883 are equipped with an internal filters, that requires regular maintenance.

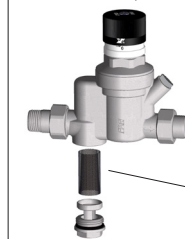

APT. 2389

*Spare filter
(Art.2880-2881-2882-2883)

APT. 2893

Сpare cartridge for pressure reducing valve



Фittings M-F



Фittings F-F